


THERMOSTATIC OPERATOR DIRECT MOUNT EVO-28


Description

EVO is a self-acting, adjustable, non-electric thermostatic operator. It has adjustable max./min. temperature, selected temperature locking feature and can be shutoff completely if required. The symbol * protects against frost damage. Each EVO thermostatic operator is individually calibrated and conforms to ASHRAE standardization rules for temperature regulation. The EVO's smooth shape and narrow air gaps gives a nice operation and makes it easy to keep clean. They can be mounted on all Macon NT series valves.



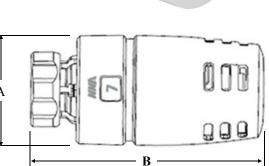

TECHNICAL DATA									
Temperature Setting Range	50°F to 82°F		Material	Engineered heat resistant thermoplastic (PBT,POM)					
Maximum Storage & Ambient Temp.	122°F		Materiai						
Maximum Water Temp.	250°F		Nut	Low Lead Brass					
Maximum Steam Pressure	15 psig		Weight	4.16 oz.					
Maximum Differential Pressure	20 psi		Color	White					
Suggested Differential Pressure	0.5 to 2.9 psi		Width (A)	1.73"					
Max. Movement	0.125"		Height (B)	3.66"					
Nominal Opening	0.018 (3.6°F)								
Long Term Test	5000 Cycles (1.3°F)								

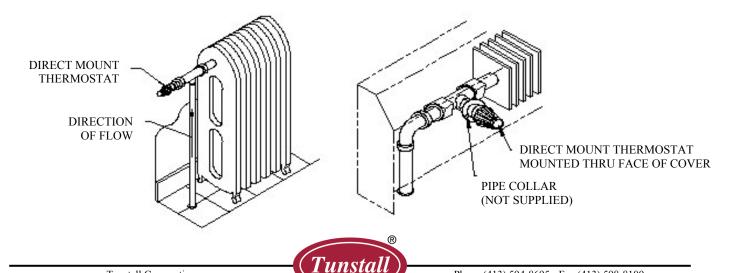

We reserve the right to alter designs, specifications and information without notice.



THERMOSTATIC OPERATOR DIRECT MOUNT EVO-28

Maximum & Minimum Setting

Maximum setting

- 1. Turn the wheel to maximum.
- 2. Push the mark in with limit tool (located opposite the dial setting window) and press in the wheel handle 1-2 mm until it stops. (Figure 1)
- 3. Remove the limit tool and press in the wheel handle until it stops. (Figure 2)
- 4. Set the required temperature according to the chart below.
- 5. Pull the wheel handle out and the maximum temperature is set. (Figure 3)

Minimum setting

- 1. Turn the wheel to minimum
- 2. Push the mark in with limit tool (located opposite the dial setting window) and press in the wheel handle 1-2 mm until it stops.
- 3. Remove the limit tool and press in the wheel handle until it stops.
- 4. Set the required temperature according to the chart below.
- 5. Pull the wheel handle out and the minimum temperature is set.

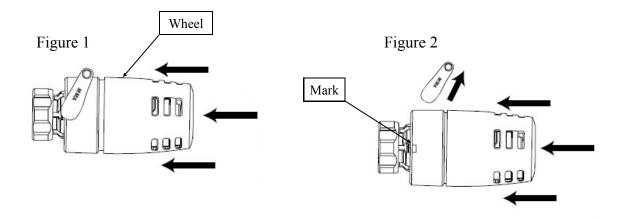


Figure 3

DIAL SETTINGS											
0	*	1	3	5	6	7	8	9			
Off	50	54	61	68	72	75	79	82			
	Frost Protection										

